
the **pickle two**

owner's manual



play more. win more.®

CONTROL PANEL

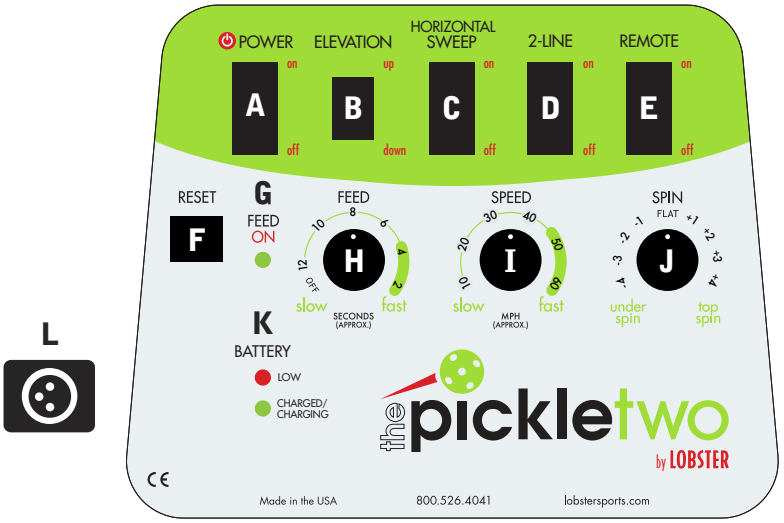

A. Power Switch – Powers the machine on and off.

B. Elevation Switch – Adjusts the ball trajectory up and down.

C. Horizontal Sweep Switch – Turns on/off the random horizontal oscillation.

D. 2-Line Switch – Turns on/off the 2-line function.

E. Remote Switch – Activates the handheld remote control. (If you did not purchase a remote, this switch is not active until you upgrade your machine from your dealer or direct from the factory.)

F. Reset Button – Pops out in event of malfunction. If this happens, turn off the machine; push the reset button back in, and power up machine. Please refer to the Troubleshooting section on page 8 or contact Customer Service if the issue persists.

G. Feed On LED – The LED lights up when the feed motor begins to turn.

H. Feed Knob – Adjusts feed interval between 2-12 seconds. Turn completely counter-clockwise to turn off the feed.

I. Speed Knob – Adjusts the speed from 10-60 mph.

J. Spin Knob – Controls amount of under and top spin on the ball.

K. Status Indicator – LED lights indicate battery level and/or machine status.

L. Charger Port – Located on the red base to left of control panel. Slide black cover in either direction to expose the jack.

MACHINE SETUP

Intended Use

This pickleball machine is intended for use on a pickleball court. For safety reasons, players should stand on the opposite side of the net at a minimum of 22 feet away from the machine. This ball machine is designed to throw **pickleballs only**.

Unpack and Keep Shipping Box

Remove the machine from the box. Keep the shipping box along with the custom packing materials in case the machine needs to be shipped back to the factory.

Assemble Machine

- Raise the metal handle by lifting up until a click is heard.
- Detach the hopper by lifting it up off the red base.
- Flip the hopper and reattach by pushing the hopper on to the red base knobs, starting with the front knob (side furthest from handle), then push down to attach the hopper to the back knob.
- **Do not remove the wire deflectors.**

Handle Operation

To raise the handle, simply lift up on the handle until you hear the lock buttons click into place. To fold the handle down, stand behind the machine and place hands on each of the plastic handle hinges. Simultaneously press up on the hinge lock buttons and gently push the top section of the handle forward over your machine.

The handle is provided to push or pull the machine. The machine is not designed to be pulled up and down stairs. If the handle is damaged or breaks in this manner, please be advised it is not covered under the warranty. Avoid rough or uneven surfaces that may bend or damage the underside of the machine.

Transporting the Machine

To prepare the machine for transport in your vehicle, invert the hopper to cover the machine and fold the handle. The machine weighs approximately 30-42 pounds depending on the model purchased and may be lifted into a vehicle by one or two people. Use the molded handholds on the underside of the machine to lift and carry the machine.

CHARGING INSTRUCTIONS

Basic Charging Instuctions

Before the first use, charge the machine until the battery is fully charged.
For optimal battery life, fully charge machine after each use. If you do not fully charge the battery after each use, the battery life will be shortened. All chargers have trickle charge technology which ensures the battery will not be overcharged.

Use the LED indicator on the charger for battery charging status. A blinking orange/red light indicates the battery is very depleted.

Charging the Battery with the Standard Charger



- Plug charger into an AC outlet then plug the connector into charger port.
- The LED on charger is red when charging, turning green when fully charged.
- A depleted battery may take up to 18-22 hours to fully charge.

If you purchased a premium fast charger with the machine, you will not receive a standard charger.

Charging the Battery with the Premium Charger

- Plug the charger into an AC outlet then plug the connector into the charger port.
- The LED on the charger is red while charging and turns green when fully charged.
- A depleted battery will be fully charged in 3 hours.

Extending Run Time of Battery with the Premium Charger

The **premium charger** can extend run time up to 2 hours. To use this feature:

- Ensure the battery is mostly charged, connect the charger to the machine, turn the machine on and play.
- The premium charger will NOT fully charge the battery and power the machine at the same time. It will not power the machine if the battery is dead.

Charging the Battery of AC/DC Models

The ac/dc models are powered by both electricity and battery. The ac/dc power cord charges the battery while plugged in to an outlet, including during machine use. The LED on the control panel will indicate a full charge when light turns green. Once the power cord is unplugged, the machine will run off battery power.

Battery Level Indication

Battery level **when the machine is in use** is indicated on your control panel LED by the following (when charging, refer to the LED light on the charger):

- **Green** SOLID & **Red** OFF ..... FULL CHARGE
- **Green** FLASHING & **Red** OFF ..... 2/3 CHARGE
- **Green** OFF & **Red** FLASHING ..... 1/3 CHARGE
- **Green** OFF & **Red** SOLID ..... DEPLETED

OPERATING INSTRUCTIONS

2-Line Oscillation Setup

The 2-line function automatically throws to two preset locations allowing you to practice alternating forehand and backhand shots. **NOTE**: The ball hopper MUST have balls in it for the 2-line oscillation feature to work.

- Fill the hopper, then turn the POWER switch ON.
- Set SPEED knob to desired speed.
- Turn HORIZONTAL SWEEP switch ON.
- Turn the 2-LINE switch to ON.
- For an 4-second interval per ball, set the FEED from 2-8 seconds.
- For an 8-second interval per ball, set the FEED from 10-12 seconds.

Ball Consistency

The consistency of ball throws is dependent on the pickleballs you use. A mixture of pickleball brands will produce inconsistent throws.

REMOTE CONTROL OPERATING INSTRUCTIONS

Elite Remote Control (optional)



- Power on your machine by pressing the POWER switch on the control panel.
- Press the REMOTE switch located on the control panel to ON to activate the remote.
- Turn the ball FEED knob to select a 2-10 second feed rate.
- From the opposite side of the court, press the buttons on the handheld remote to turn on/off the feed and/or sweep.

Elite10 Remote Control (optional)



- Power on your machine by pressing the POWER switch on the control panel.
- Press the REMOTE switch located on the control panel to ON to activate the remote.
- Turn the ball FEED knob to select a 2-10 second feed rate.
- From the opposite side of the court, press the black FEED on/off button on the handheld elite10 remote to begin play.

REMINDER: **The switches and dials on the control panel will always override the remote control.**

REMOTE CONTROL OPERATING INSTRUCTIONS

Elite10 Remote Control for Apple (optional)



The **elite10 remote for Apple** works with iPhone, iPod, iPad and Apple Watch. You must purchase the **elite10 remote for Apple** and have it installed for the free remote app to work.

Instructions:

- On your device, download the **Lobster elite remote control** from the App Store®
- Power on your ball machine and press the REMOTE switch on control panel ON.
- On your device, go to the "settings" and click "Wi-Fi". A network called "Lobster Sports(x)" will be detected. *Select this network.*
- Open the **Lobster elite remote control** app on your device and allow up to 90 seconds for your machine and device to sync — they are connected when the remote CONNECT/DISCONNECT button says DISCONNECT.
- Upon first app launch, you may be asked:
  - Allow "elite" to use your location? *Select "Allow While Using App"*
  - "elite" would like to find and connect to devices on your local network. *Select "OK"*
  - The Wi-Fi network "Lobster Sports-xx" does not appear to be connected to the Internet. *Select "Keep Trying Wi-Fi"* although "Use Cellular Data" does not cause a problem or actually use cellular data.
  - To verify or modify these settings, go to the device settings and select the **Lobster elite remote** control.
- When using Apple Watch, the iPhone must stay awake. To change "awake" settings, navigate to Settings>Display & Brightness>Auto-Lock>Never.
- In the case of a disconnect, click the CONNECT button to reconnect.

REMINDER: Please be advised that the switches and dials on the control panel will always override the remote control.

OPTIONAL ACCESSORIES

External AC Power Supply

For extended court time, the external **elite power pak** transforms our battery ball machines into an AC powered ball machine. Using the **elite power pak** with our machine allows for continuous, uninterrupted use. The battery must be mostly or fully charged for this feature to work. With this optional accessory, the machine can run off whichever power method the user prefers.

External Battery Pack

The **external battery pak** will provide an additional 4-8 hours of court time and can be used with any of our pickle or elite series machines.